



### Installation Instructions for Clevis Style Link Arms

1. Use two 9/16" and one 3/4 " wrenches to remove the old style link arms from lever arm and jaws. Remove long 3/8" bolt and washer from the lever arm. Remove black bolt from jaws.
2. The new clevis style link arm has a subtle bend near the top. Lay the link arms next to the stake puller, with the clevis pointing towards the jaw and the bend pointing down. Photo 1 below.
3. Insert clevis pin through the clevis and jaws.
4. Insert cotter pin through the clevis pin and bend cotter pin around axis of pin. Photo 2 below.
5. Swing the link arms up to the lever arm and re-insert the long 3/8" bolt through the link arm and lever arm. Make sure that the teeth of the jaws are facing each other. Photo 3 below.
6. Install the washer on the bolt on the outside of the link arms. Photo 4 below.
7. Start the self locking nut on the bolt by hand, then tighten up with wrenches snug to washer, then back off nut one half a turn. **Handle should raise and lower freely.**



Photo 1

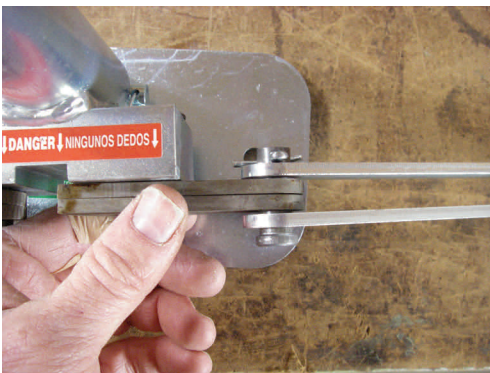


Photo 2



Photo 3

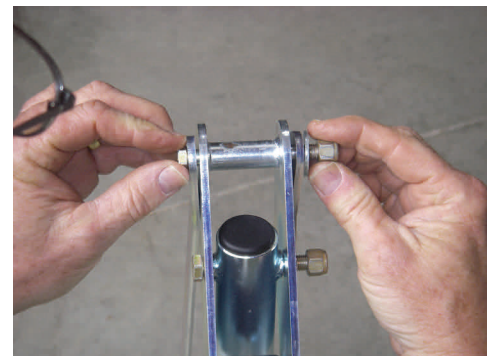


Photo 4

If you have any questions or suggestions about this procedure, call Bob Anderson at 937-609-8937.  
**Thank you for choosing JackJaw® Tent Stake Extractors!**